



# Freestanding Bath Install Instructions

You will find dimensions for each bath on the respective website pages. [Click here](#)

**The popup waste supplied with the bath is loosely fitted.  
If you intend to use the supplied waste, we recommend your plumber removes and completely seals and installs it.**

## Recommended waste

### Easy Clean Bath Waste for these baths

<b>Gem</b>	<b>Holly</b>	<b>Penelope</b>	<b>Savannah</b>	<b>Victoria</b>	<b>Michelle</b>
<b>Harlow</b>	<b>Madison</b>	<b>Rosemary</b>	<b>Taylor</b>	<b>Whitney</b>	<b>Christine</b>



This waste replaces the std bath waste and gives you a waste and trap that is all in one and is the easiest way to fit a trap to your freestanding bath enabling the installation to meet plumbing regulations..

The Installation is very simple, replace the std bath waste with this unit, and seal in your usual manner.

Attach the flexible pipe (included with bath) to the trap and fit to your waste pipe coming through the floor with an elbow.

This bath waste can be bought from our [website here](#)

\*\*\*\*\*

## Floor Waste installation for these baths


<b>Amy</b>	<b>Natalie</b>
<b>Emily</b>	<b>Pamela</b>

Install a suitable floor waste to suit your installation needs.


We recommend the [Smart floor waste for concrete or wooden floors](#)

Using this floor waste enables you some leeway in the positioning of the waste as the top of the is 250mm dia. We recommend this type of waste as it makes the installation easier and separates and seals your bathroom from the space under your house stopping insects etc from getting in as would happen if you fit a std waste after the bath is installed.

The recommended position of the floor waste is to either side of the bath waste, this enables you to place the floor waste where it suits best allowing for floor joists etc. Install the floor waste in either of the 2 blue marked areas below. Most of our baths come with a good quality flexible waste (some at present don't) in some cases you may need to source a flexible pipe from a plumbing merchant.

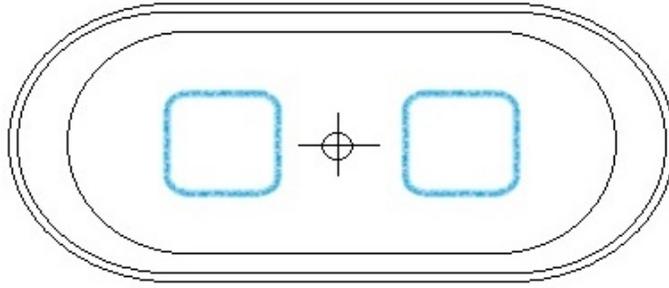

In some installations you may find that best position for the floor waste is in center under the bath waste position, (as image below) This enables you, once a floor waste is fitted and with the addition of a dropper from the bath waste to just lower the bath into position.

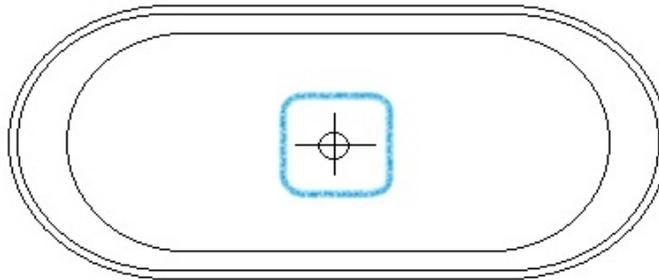

### **Installation Instructions:**

Once the flooring is finished you are then able to fit the Bath.

Place bath on floor in the desired position and adjust the leveling feet so the bath is level.

Now fit and seal the flexible pipe to the bath and push the other end into the rubber on the top of the trap and push the bath into place.

Then finish off around the bath as you require.

Congratulations all finished.

Cleaning your Bath:

Please clean your **Freestanding Bath** with a soft cloth and warm water. A spray on window cleaner and soft cloth can be used to remove light marks. Heavier marks can be removed with liquid jiff and a soft cloth, followed by a spray on window cleaner and soft cloth.

**Under no circumstances should any form of abrasive cleaners be used.**

**TO THE OWNER:**

**Please retain these instructions for future reference**

**If you have any questions regarding installation or maintenance of any of our products, please contact**

**Henry Brooks & Co Ltd**

**Ph: 0508 736 6828**

**[sales@henrybrooks.co.nz](mailto:sales@henrybrooks.co.nz)**

**[www.henrybrooks.co.nz](http://www.henrybrooks.co.nz)**

