

# DECINA

DISCOVER INDULGENCE



## BACK-TO-WALL FREESTANDING BATH INSTALLATION & OWNERGUIDE

Manufactured from premium sanitary grade acrylic. This manual is designed to provide the correct installation steps & care advice, for a along lasting installation.



**THIS PRODUCT MUST BE INSTALLED BY A QUALIFIED TRADESMAN**

### **PRE-INSTALLATION CHECKS**

- ❗ UNPACK & CHECK THE ITEM IS CORRECT & NO DAMAGE HAS OCCURRED DURING TRANSIT.
  - ❗ IF THERE ARE ANY VISIBLE DEFECTS DO NOT PROCEED WITH THE INSTALLATION & PLEASE CONTACT US IMMEDIATELY.
- ANY CLAIMS FOR DAMAGE WILL NOT BE ACCEPTED AFTER INSTALLATION.**
- ❗ PROTECT YOUR BATH BEFORE & DURING INSTALLATION, SCRATCHES &/OR CRACKS &/OR SURFACE DAMAGE SUSTAINED DURING OR AFTER THE INSTALLATION ARE NOT COVERED BY WARRANTY.
  - ❗ INSTALLATION MUST BE IN ACCORDANCE WITH BUILDING REGULATIONS & LOCAL AUTHORITY REQUIREMENTS.

### **CARING FOR YOUR BATH**

Decina uses the highest sanitary grade acrylic which is resistant to most things it may come into contact with. However naked flames, cigarettes or strong chemicals should be avoided and removed immediately. To preserve the high gloss acrylic surface, Decina recommends the following:

- When filling the bath start with cold water to allow the bath to gradually adapt to the temperature.
- After using your bath clean with a soft cloth and warm soapy water to clean any oils or soap residues, to prevent tide marks & preserve the polished surface.
- We recommend cleaning using warm soapy water and only using mild liquid detergents. Do not use powders, pastes, creams, chemicals, window cleaning sprays, chemicals or abrasive cleaners.
- Cream-type cleaners may be used only to remove stubborn marks. Scratches can be removed with a fine polish like Brasso.

## INSTALLATION STEPS


1. Remove your freestanding bath from the box. Check for damage and ensure your bath does not come in contact with any rough surfaces which may scratch your bath. Place your freestanding bath on cardboard or carpet during inspection. Place the freestanding bath in the correct position for installation.

2. Adjust the leveling feet until the bath base is 3-5mm above the finished floor.

If measuring from the unfinished floor take into account the floor finishing thickness (such as tiles) into account. Turn the feet bolts and level accordingly.


Ensure there is 3-5mm of space between the bottom of the bathshell and the floor. Installing directly on the floor will place pressure on the outside wall of the bath and will potentially crack the bath.

Ensure the bath is level so all water can drain to the waste outlet.

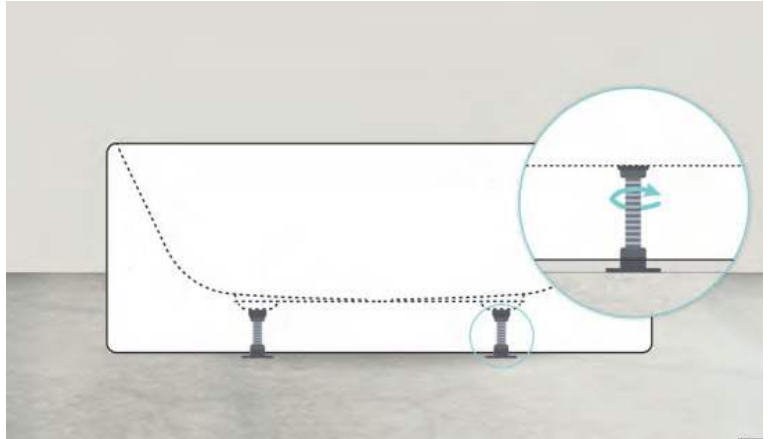

3. Carefully tilt the bath on its side and connect it to the drain outlet. We recommend using a Flexible Connector to your waste.

Ensure the Flexible Connector is cut to the correct length for easier installation and to prevent drainage issues.

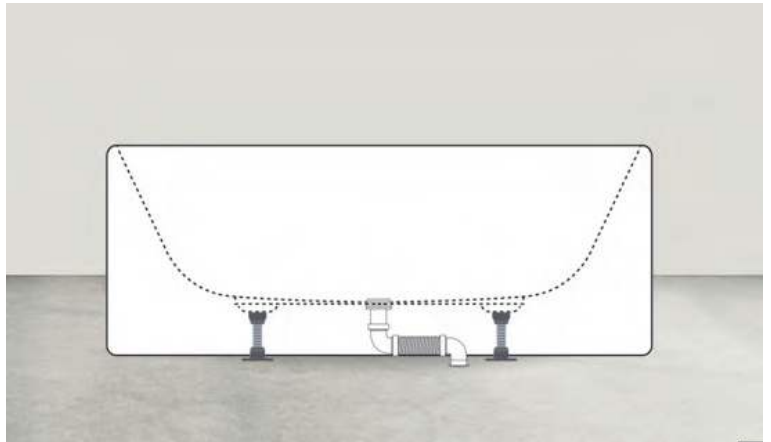

4. Before finishing, water test for leaks and correct drainage.

Fill the freestanding bath with water and check the water flows easily to the waste outlet.

A small amount of residual water may be present due to surface tension.

5. Apply silicone around the bath outline and allow it to set for a minimum of 24 hours.



**DECINA**  
DISCOVER INDULGENCE

\*Warranty T&Cs apply. All dimensions are nominal & subject to manufacturing tolerances & may vary +/- 5mm therefore we strongly recommend installation does not occur until after delivery. We reserve the right to modify or change specifications without notice. Please confirm all particulars with your sales consultant prior to purchase.

[www.henrybrooks.co.nz](http://www.henrybrooks.co.nz)  
[sales@henrybrooks.co.nz](mailto:sales@henrybrooks.co.nz)

