Freestanding Bath Install Instructions

You will find dimensions for each bath on the respective website pages. Click here

The popup waste supplied with the baths below is loosely fitted.
If you intend to use the supplied waste, we recommend your plumber removes and completely seals and installs it.

Recommended waste

Easy Clean Bath Waste for our

Rosemary, Madison and Michelle baths along with others from various suppliers:



This waste replaces the std bath waste and gives you a waste and trap that is all in one and is the easiest way to fit a trap to your freestanding bath enabling the installation to meet plumbing regulations..

The Installation is very simple, replace the std bath waste with this unit, and seal in your usual manner.

Attach a flexible pipe which will enable an easier install to the trap and waste pipe coming through the floor with an elbow.

Click here for dimensions and purchase of this bath waste.

****

These are only a guide and you will need to confirm what suitable for your specific install.

The recommended position of the floor waste is to either side of the bath waste, this enables you to place the floor waste where it suits best allowing for floor joists etc. Install the floor waste in either of the 2 blue marked areas below. A good quality flexible waste pipe will make installing easier you will need to source a flexible pipe from a plumbing merchant.

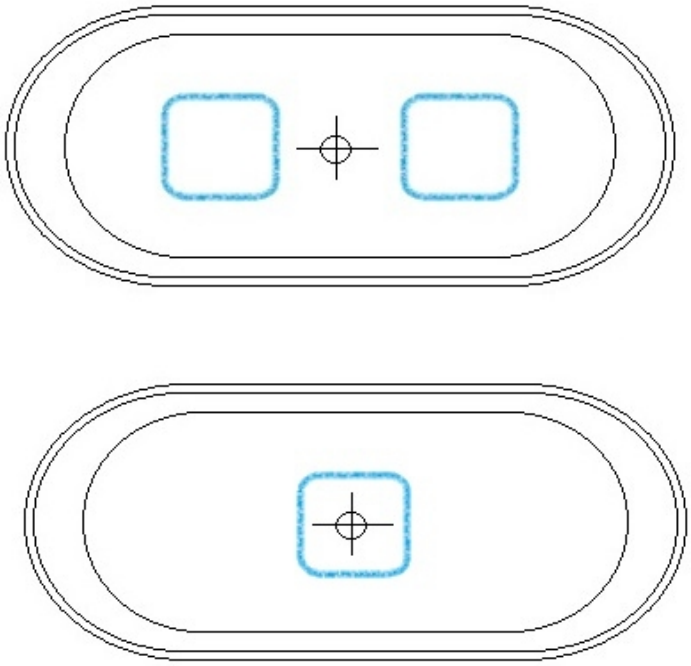

In some installations you may find that best position for the floor waste is in center under the bath waste position, (as image below) This enables you, once a floor waste is fitted and with the addition of a dropper from the bath waste to just lower the bath into position.

Installation Instructions:

Once the flooring is finished you are then able to fit the Bath.

Place bath on floor in the desired position and adjust the leveling feet so the bath is level.

Now fit and seal the flexible pipe to the bath and push the other end into the rubber on the top of the trap and push the bath into place.
Then finish off around the bath as you require.

Congratulations all finished.

Cleaning your Bath:
Please clean your **Freestanding Bath** with a soft cloth and warm water. A spray on window cleaner and soft cloth can be used to remove light marks. Heavier marks can be removed with liquid jiff and a soft cloth, followed by a spray on window cleaner and soft cloth.

Under no circumstances should any form of abrasive cleaners be used.

TO THE OWNER:
Please retain these instructions for future reference
If you have any questions regarding installation or maintenance of any of our products, please contact

Henry Brooks & Co Ltd

Ph: 09 913-3110

sales@henrybrooks.co.nz

www.henrybrooks.co.nz

HENRY BROOKS
BATHROOMS